

Multi-Task U-Fill Sprayer Gun 421750



Please use this equipment with care and observe all warnings and cautions.

WEAR protective clothing and eyewear when dispensing chemicals, emptying equipment or changing metering tips

ALWAYS observe safety and handling instructions.

ALWAYS direct discharge away from you or other persons.

ALWAYS dispense chemicals in accordance with instructions on label and SDS.

Exercise **CAUTION** when maintaining your equipment.

KEEP equipment clean to maintain proper operation.

ALWAYS re-assemble equipment according to instructions. Be sure all components are firmly screwed or latched into position.

ATTACH only to tap water outlets (25 PSI minimum, 85 PSI maximum).

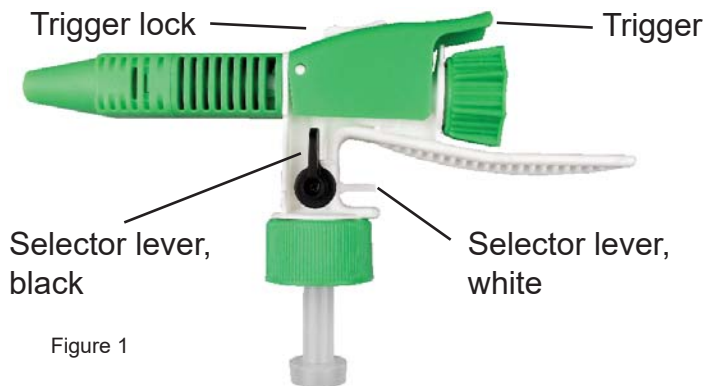


Figure 1



Figure 2



Figure 3



U-Fill Sprayer 421750 Instructions

1. Remove all parts from carton.
2. Thread product bottle onto gun, tighten, Fig 2
3. Connect garden hose to gun and water supply spigot Fig 3.
4. Flip selector lever, black handle (product port) to the up position Fig 1.
5. Turn water supply on at spigot.
6. Aim sprayer toward surface to be cleaned and press trigger down to activate.
7. Spray surface to be cleaned.
8. Agitate areas if needed.
9. Let trigger up to stop dispensing.
10. Flip selector lever (white handle) to up position to rinse Fig 1.
11. Press down on trigger and rinse surfaces.
12. Supply hose must be disconnected from gun after each use (Figure 3).